




Installation instructions

MINOROC®

Inox termination




The termination is slid into the rope.

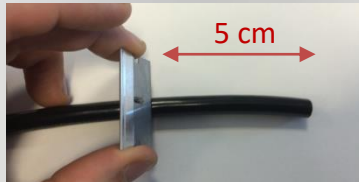

At the end of the rope a circumferential cut is made around the rope sheath (at 5 cm). Care must be taken to avoid cutting through the core fibers (very important!). Finish removing the sheath by folding the cable repeatedly.



Remove the cut part of the sheath

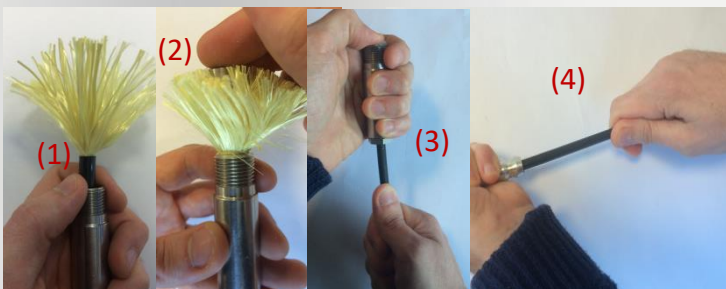

In vertical position, fibers are positioned around the termination (in a uniform way) (1). Place the spike in the center of fibers (2) then pull downwards the cable to put back the spike in the cable (3). Once connected, pulled repeatedly to exercise a first tension to the cable (4).



Screw the superior and lower parts of the termination to complete the system.
Then the system is perfectly waterproof.